
**SOLARIUM**

**IRRIGATION**

**TREADMILL**

**SAFETY WALL**

**WALKER**

## Lubrication Solutions

### Basic automatic lubrication system

Lubrication system 12 months / Article no. 23-4-00-00150




Proper lubrication of the rotating parts is essential to reduce failure and increase exerciser life.

An automatic lubrication system intended for automating and centralizing grease lubrication is a solution. The system consists of a hose with couplings and a grease cartridge.

The grease cartridge works without a battery and is adjustable between 1 and 12 months. Depending on the use of the exerciser, you set the period.

This lubrication system is ideal for all ground-mounted exercisers.


- ✓ Replaceable grease cartridges
- ✓ Low installation costs
- ✓ Compact and reliable
- ✓ 12 months maintenance free
- ✓ Temperature range -15° C to +60°C
- ✓ Multifunctional, indoor and outdoor
- ✓ No chemical waste



**SOLARIUM**



**IRRIGATION**



**TREADMILL**



**SAFETY WALL**



**WALKER**



## Features

### Safety:

By lubricating the ring bearing of the exerciser in time, problems due to wear are less likely to arise.

### Durability:

Lubrication of rotating parts ensures a longer service life.

### Appearance:


All lubricants are Multi purpose grease.

### Maintenance:

Maintenance is conservation, this also applies to the exerciser.




**Q-LINE**



**SOLARIUM**



**IRRIGATION**

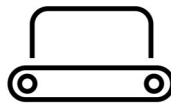

**TREADMILL**



**SAFETY WALL**





**WALKER**

## Configuration & options



Shell for lubrication system 125cc

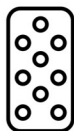

SOLARIUM



IRRIGATION



TREADMILL



SAFETY WALL



WALKER

## Specifications

Connection	6mm
Drive system	Gas
Basic material	Plastic
Required working pressure	5 bar
Fixings	Mounting bracket
Suited for	Slewing ring
Weight	300 gr
Included	30 cm hose
IP rating	68
Other	125CC
Time	1 to 12 months
Transport weight	1 kg
Transport size	25 x 10 x 10 cm

## Contact details

**Q-Line Equestrian B.V.**

Haarbrinksweg 47

7678 RS Geesteren

Tel. +31(0)546212361

[info@Q-Line.com](mailto:info@Q-Line.com)

[www.q-line.com](http://www.q-line.com)